


100mm DEPTH OF SHREDDED CEDAR BARK MULCH OR AS SPECIFIED. KEEP MULCH 50mm AWAY FROM TRUNK FLARE

150mm HIGH HORSESHOE EARTH BERM ENCIRCLES TRUNK ON LOW SIDE OF SLOPE

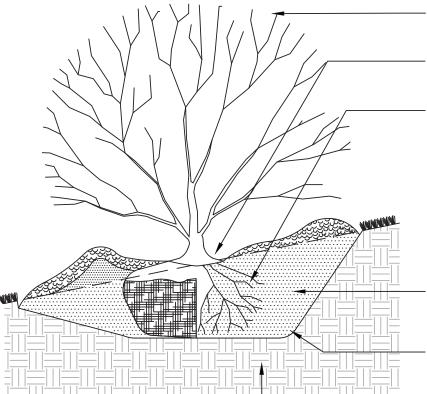

ONLY PRUNE DEAD OR DAMAGED BRANCHES PRESERVING THE NATURAL CHARACTER OF THE PLANT

HIGH SIDE OF TRUNK FLARE AT OR JUST ABOVE GRADE. TRUNK FLARE SHOULD NOT EXTEND BELOW GRADE

CONTAINER — CUT AND REMOVE ALL POTS, BURLAP, NAILS, STRINGS, ETC. BARE ROOT — SPREAD ROOTS EVENLY OVER TAMPED MOUND OF PLANTING SOIL. WORK SOIL BETWEEN ROOTS

BURLAP — CUT AND REMOVE

MATERIAL FROM TOP \$\frac{1}{3}\$ OF ROOTBALL

ONCE POSITIONED (IF APPLICABLE).

BACKFILL WITH PLANTING SOIL AS SPECIFIED. HAND TAMP SOIL TO PREVENT SETTLEMENT AND TO ELIMINATE AIR POCKETS.

BOTTOM OF ROOT BALL RESTS ON UNDISTURBED SUBGRADE OR RECOMPACTED SOIL, SCARIFY PIT PRIOR TO PLACING ROOTBALL

COMPACTED SUB-SOIL TO: 98% S.P.D - BOULEVARDS 95% S.P.D - OPEN SPACE

NOTES:

- 1. ALL DIMENSIONS IN MILLIMETERS UNLESS OTHERWISE NOTED
- 2. PRUNE ANY VISIBLE GIRDLING ROOTS ONCE EXCESS SOIL IS REMOVED AND LOOSEN ANY ROOTS THAT ENCIRCLE THE ROOT BALL. POT BOUND SHRUBS ARE NOT BE ACCEPTABLE. SLIT THE ROOT BALL VERTICALLY 3 TIMES EVENLY AROUND THE CIRCUMFERENCE OF THE ROOTBALL TO A 13mm DEPTH
- 3. ENSURE ALL TAGS, ROPES, STRAPS AND CONTAINERS ARE REMOVED FROM SHRUB
- 4. REFER TO STANDARD #755 755.20 FOR PLANT MATERIAL SPECIFICATIONS
- 5. REFER TO STANDARD #753: TOPSOIL NOTES FOR PLANTING SOIL REQUIREMENTS

THE CORPORATION OF THE TOWN OF WHITBY

PLANNING & DEVELOPMENT DEPARTMENT

CHECKED	lust.	
APPROVED	¥	
SCALE:	N.T.S	

SHRUB PLANTING ON A SLOPE
 DWG, DATE:
 JANUARY 2021

 REVISION No.:
 002

 REVISION DATE:
 MAY, 2022

 DWG No.
 7 1 4